


## MANUAL COMBI AWNING

Caravan - Awning Combi Canopy

This 2-in-1 Combi Awning you can mount at the caravan or at the front of your caravan tent to create an extra sunroof!



To find the correct size you can do like the ETCT0001 by measuring the Size A but if you want to fix it also to the caravan tent it is important to know roof size of your caravan awning Size B

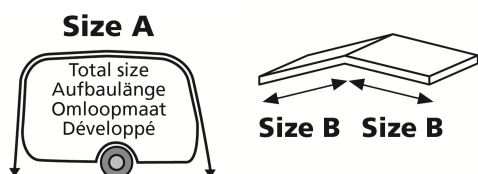

**Available in 200cm or 240cm depth**

The 240 cm canopy has next to the 7mm piping also a 6 mm piping. The 7 mm is for the caravan profile and the 6mm is for the separate pole buckles to mount your roof poles without drilling.

What is also important to know that the Eurotrail Awnings of 240cm depth all have an extra 6mm “keder” or piping.

So the normal piping of **7mm** is for the caravan profile but the **extra 6mm** is for the DWS buckles (exclude) to mount an extra roof pole without drilling into the caravan. Because the depth of 240 cm is quite large it is always better to use roof poles to make a complete frame so that the awning is more supported by the frame and more tight.



## SIZE CHARD

Size	Roof size B	Caravan size A
04	144-155cm	675-700cm
05	156-168cm	700-725cm
06	169-180cm	725-750cm
07	181-193cm	750-775cm
08	194-205cm	775-800cm
09	206-218cm	800-825cm
10	219-230cm	825-850cm
11	231-243cm	850-875cm
12	244-255cm	875-900cm
13	256-268cm	900-925cm
14	269-280cm	925-950cm
15	281-293cm	950-975cm
16	294-307cm	975-1000cm
17	308-321cm	1000-1025cm

### How do I place the plastic ring at the right position?

To fix the awning to the caravan tent you need to make the holes for the poles.  
The awning come incl. special rings 4 pcs: 3 to use and 1 spare, which you have to mount to the special reinforced parts of the caravan roof. The rings can be placed with a hammer.

1) First find the middle of the awning, make a small hole in the fabric and place the ring. Put one side on top and the contra side of the ring on the other side. Press together with your hands, than with a soft hit of the hammer. Check if the ring fits oke is not than hit it again with the hammer.

2) Put the awning over the center pole and place the awning over the tent to each side. Pull the awning to the side pole and determine the position of the ring. Do this on both sides and place the ring. The awning is now ready to use.



### **Side panel is optional available**

The correct side panel is the **ETCT0024**

This side panel is available in 200cm or 240cm depth (with or without window) depending on the depth of your Combi Anwing. (Left and right side panel are the same)



### **Optional canopy frame set (ETSP0515)**

A frame set for awnings is optional available. It consists of: two adjustable upright steel poles Ø 22mm 140/200cm and 1 upright centre pole 170x250cm. Incl. guy ropes, pegs and storage bag.

